


STEP 1

Preparing the lubricating point

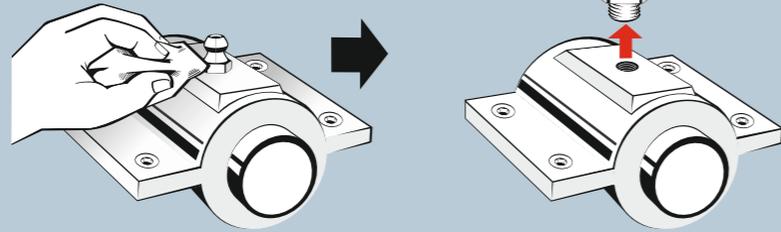


Clean components thoroughly!

STEP 2

Connecting elements

Connecting elements like hoses or fittings have to be prefilled.

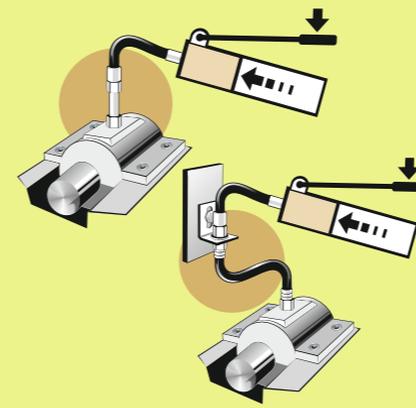

Use the same lubricant!
as in the lubricator!

STEP 3

Filling



Remove cover

Fill up to "MAX" with lubricant



Don't overfill

STEP 4


Start up



The magnet cap is the key to make settings of BEKAONE.

1.

Remove magnet cap

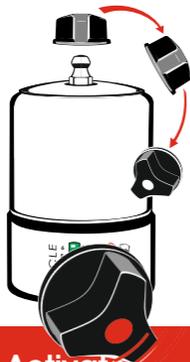

2.


go to Activate Zone



3.


and place it on Activate Zone

Red LED flashes 5x

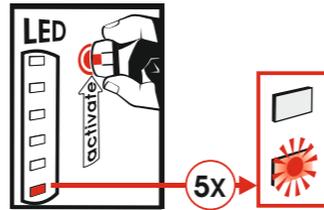



4.

Remove magnet cap and wait approx. 1 - 2 sec

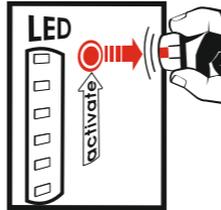


5.

Go back to Activate Zone

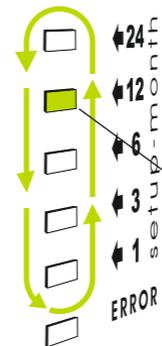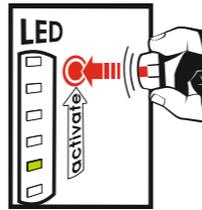


6.

Green LED runs through LED strip

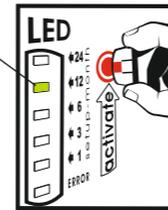

7.


Remove magnet cap as soon as requested setting is reached

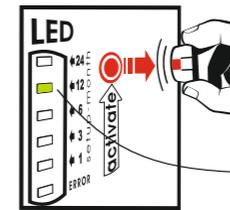

Example: 12 months

8.

In case of error or if the settings should be changed:

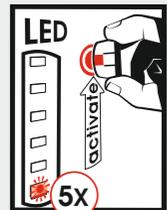

- Place magnet cap on Activate Zone
- Red LED flashes 5 times. Pump is switched off. Red LED confirms
- Switch on pump.

STEP 5

Additional lubrication

An additional lubrication is necessary:
- for filling an empty BEKAONE
- for an intermediate lubrication

Activate Additional lubrication



Red LED flashes 2 times

Pump starts delivering

As shown in picture

- Place magnet cap on Activate Zone
- LED flashes 2x
- Remove magnet cap
- Pump starts running (approx. 7sec)
- Approx. 4sec. break
- Pump starts running (approx. 7sec)

This procedure should be carried out 5 times until lubricant comes out without air bubbles.



Pump works approx. 7 sec

Pump works approx. 7 sec

Green LED lights corresponding to month setting



Lubricant has to come out without air bubbles



not OK



OK



Screw in BEKAONE